



Mainconsole software download link: <http://www.nuuo.com/DownloadDetail.php?id=0117> (Home page > Downloads > Software/ Firmware)



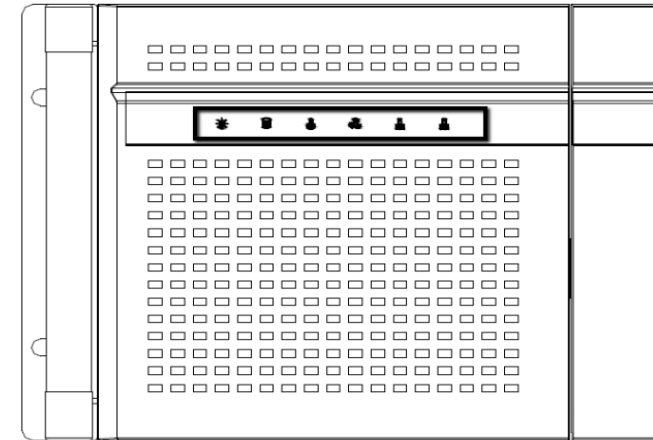

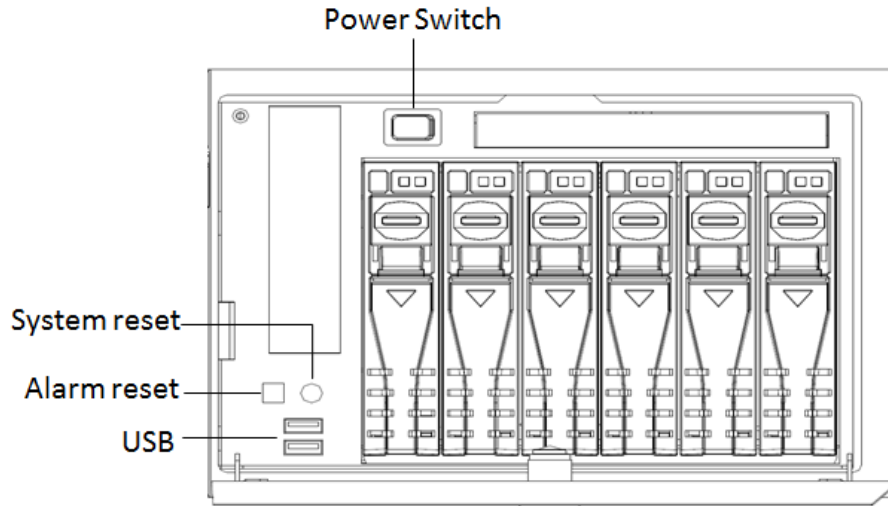


Momentary Power switch: Press this switch to turn the system power on or off. Please use system shutdown or press this switch for few seconds to turn off the system ATX power.

System Reset button: Press this button to reboot the system.

Alarm Reset button: Whenever a fault occurs in the system (e.g., fan failure or the chassis is overheated), the audible alarm will be activated. Pressing this button stops the alarm from beeping.

Dual USB ports: For connecting a wide range of USB devices for data transfer, backup or input.

LED	Description	Green	Red
Power	 System Power	Normal	Abnormal
Fan	 Cooling Fan status	Normal	Abnormal
Temperature	 Temperature in the Chassis	Normal	Abnormal
Hard Disk	 Hard Disk Drive Activity	Data access	No light
LAN	 LAN1 & LAN2 status	Normal	No light
	Data transmit through LAN	Blinking	